



## Introduction:

This remote is an all-in-one product for the use in your PC and TV by the combination technology of RF & IR in one device.

The 2.4G RF Media Center remote control with finger touch slim sensor combining with IR functions is the best computer input device and TV remote on market today. Its RF design is equipped with Finger Touch sensor with mouse keys and MCE Hot Keys. Not only this, it combines IR within this model to control home device like TV. With RF/IR combination, you can have multi-choices and pleasures.

Under 2.4GHz RF, you can control devices even when you can't see them, so just keep the entertainment system behind the cabinet.


With this RF/IR remote control and follow the instructions contained in this manual, you will definitely obtain higher than ever entertainment enjoyment.

# Installation

RF mode for PC :

1. RF and IR switch mode

Keys Description (RF)

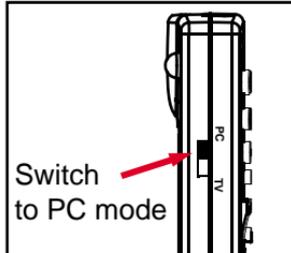

CPI adjustable:

Set + number button 1 : 1000

Set + number button 5 : 500

Power Down

Multimedia Control Keys:

Record ,Stop ,Play/Pause ,  
Forward ,Rewind,Next-Track ,  
Pre-Track , Volume Up,  
Volume Down ,Mute ,  
Channel Up, Channel Down

Numerical keys :

Number Lock, Clear, Enter,  
0-9 , \* , #

Battery Low LED

INFO

MCE Direct Keys:

My TV ,My Music,  
My Picture ,My Video,  
MCE start key, Guide

Finger Touch Sensor  
and Mouse Keys:

Press sensor as Left Click  
Directional 4 keys ,  
Mouse keys:  
Left click ,Right Click

Hot Keys:

Back , Del , Esc , Close ,  
Internet



2. Turn on the computer



3. Plug the nano receiver into the USB port of your computer.



4. Open the battery cover under the remote and place 2 AAA batteries inside the battery compartment.


Push to open



Dongle storage

5. Setting ID:

- a. Press ID button on the back of remote
- b. Close the battery cover.

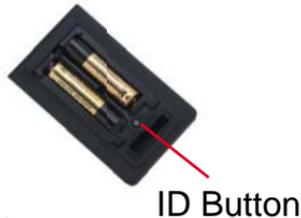



Note:

- 1. When Battery Low LED is on, please change batteries.
- 2. When processing ID setting, make sure the distance between the receiver and remote is within 30 cm ( around 1 feet )

# IR mode for TV


## 1. RF and IR switch mode

### Keys Description (IR)

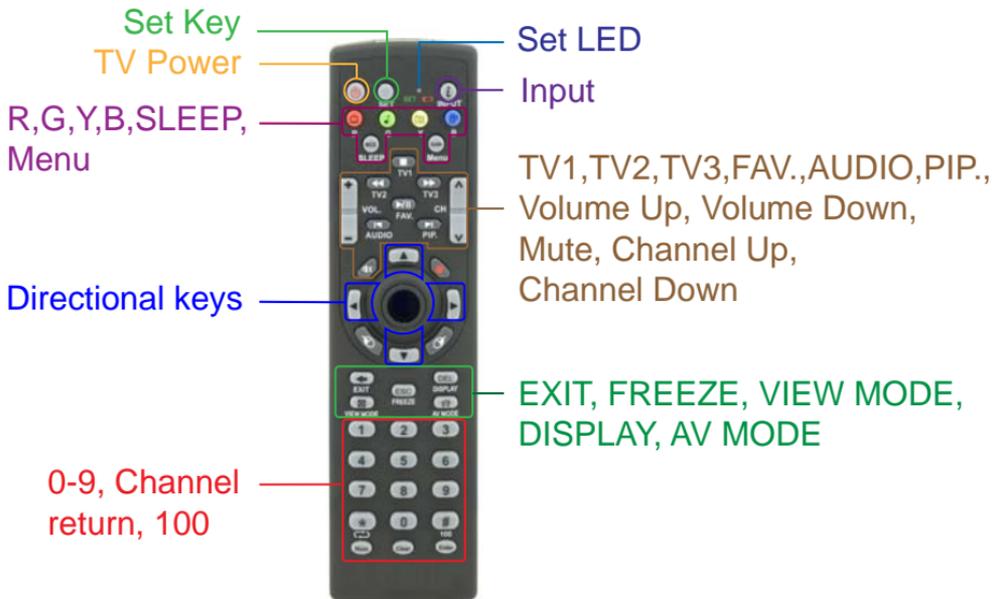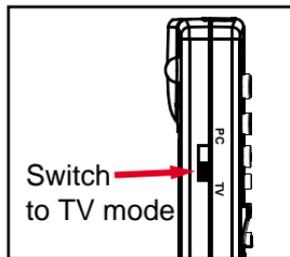


## 2. Code Set up

- a. Turn on TV
- b. See the table from page 8 “TV code table” and find out the code of your TV.
- c. Press and keep holding “set “ key for 5 seconds until the LED indicator lights up. (Picture A)
- d. Press the number buttons to enter the TV code ( 3 digits ) (Picture B)

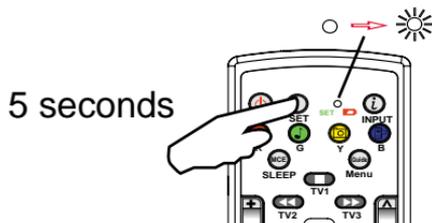

(Picture A)

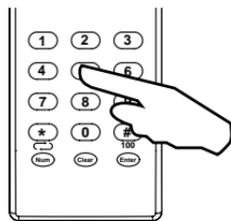

(Picture B)

- i. The LED will be off if the code is correct, otherwise the LED will be flashing 2 times, that means the setup is incomplete. Return to Step d and enter the correct code again.

ii. Setting for IR TV remote is completed.

During the setting ,if you want to stop and not save the code, please press the “ set “ key any time and the LED will be off.

(remote will quit from setting mode in 15 sec. if no any input.)


### 3. Code Auto Search

a. Turn on TV .


b. Press and keep holding “set “ key for 5 seconds until the LED indicator lights up.(Picture A)

c. Press and release “ Power” key, the remote will enter the status of Auto Search.(Picture B)

d. While the remote has searched the right code successfully, the TV will be turned off automatically, then press” “Set” key to save the code and leave Auto Search . The indicator will be off.(Picture C)

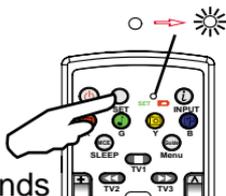

(Picture A)

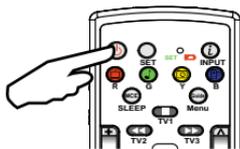

(Picture B)



(Picture C)

#### e. Checking the setting :

Turn on the TV and check functions of other keys to see if they are working correctly, such as [CH+/-] & [ 0- 9 ]. If not, return to step b to enter the status of Auto Search again.

- \* The default value of first setting is for TV1 and please press TV 2 before pressing “ set “ key for the setting of the second TV. This remote is available for up to 3 sets of TV setting at one time

#### Information to the users

The herein code is applicable for most popular TV on market, later version of TV which is not included in the list may result in improper function for some keys on the remote.

#### Warning

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

# TV code table

ACER 宏碁	001, 002, 258, 360, 361
Achinese 亞齊諾	003, 004, 005, 006, 256
AKAI	007, 008
Albatron	009, 010
AOC 愛德蒙	011, 012
ASIA	013
ASUS 華碩	014, 015, 257
Avorcent	016
Bateslas	017
BenQ 明基	018, 019, 359
BLUESky	020
CLAIR E	021, 259
CHIMEI 奇美	022, 023, 024, 025, 026, 027, 308, 309, 310, 311, 312, 313
CHUN 青雲	028, 029, 030, 031, 032, 033, 034, 393, 394, 396, 397, 398, 399
Color tac	254
COMBO	036
CORAL 酷樂	037
CRESCO 光軒	038
Digimaster	039, 040
Dynaview	041, 042, 043, 044
ELEO	045
ESONIC	046, 047, 260, 362
Ex-POWER	048
Freetech	049
Frigidair 富及第	050, 051, 052, 053, 261
FORMASA	054, 055
Fujimaru	056
Genii 集穎	057
Gibson 吉普生	058, 059, 060, 061, 062, 063, 064, 065, 066, 067, 263, 264, 265

HANNS-G 瀚宇	068, 390
HANNspree	069, 070, 071, 072
HERAN 禾聯	073, 074, 075, 267
Hero Sonic	075
HIPLUS 畫佳	076, 077, 078, 079, 080, 081, 082, 083, 306, 438, 439, 440, 441, 442
HITACHI 日立	084, 085, 268, 269, 421
IMirc	086, 270
iWitch	087
JEAN	088
JVC	089, 090, 271, 435
KAIDEL 凱都	091, 092, 093, 094, 307, 346, 347
Kolin 歌林	095, 096, 097, 098, 099, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 272, 273, 274, 422, 423, 424, 425
LG 樂金	110, 111, 112, 318, 319
LCD TV	113, 114
LiTE I	115
MAG 美格	116
Microtek 全友	117, 118, 278
MITSUBISHI 三菱	119, 275, 426, 427
MODE e -style	120, 121
Monix	122, 123
MOZO	124
MRT -N	125, 277
NALTEC 國齊	126
NEOKA 新禾	127, 276
NEO SCAN	128
NEW COLOR	129
NICHIRO	130, 131
Optima	132
ORWARE	133

Panasonic 國際	134, 135, 136, 340, 341, 342, 343, 344, 345
PHILIPS 飛利浦	137, 138, 139, 140, 141, 417, 418, 419, 420
Pinker	075
PIONEER 先鋒	143
POLY VISION	144, 145, 146, 147, 148, 255, 279, 377, 378, 379
POWER SONIC	075
PROTON 普騰	149, 150
Quanta 廣達	151
RELON 雷諾	152, 366
RGB	153
RGM	154, 155
RCA	281, 363
RM -7	415, 428,
RMG	432,
ROWA 樂華	156
SAGA	157
SAMPO 聲寶	158, 159, 160, 284, 348, 349, 350, 351, 352, 356, 357, 358, 392
SAMSUNG 三星	161, 162, 416
SANYO 三洋	163, 164, 165, 166, 167, 168, 169, 285, 286, 287, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339
SHARP 夏普	170, 171, 172, 288, 353, 354, 355
SONY 新力	173, 175, 177, 289, 381, 383, 385, 386, 443, 444, 445
SOWA 首華	178, 179, 180, 181, 182, 290
SUPER SONIC	075
SYNCO 新格	183, 184, 185, 186, 291, 365
TATUNG 大同	187, 188, 189, 190, 191, 192, 193, 194, 292, 400, 401, 402, 403, 404, 405, 406, 407, 431, 446, 447, 448, 449, 450, 451

TECO 東元	034, 142, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 282, 294, 382, 384, 408, 409, 410, 411, 412, 413, 414
TES	205, 206
TFC 旭光	207, 208, 209
TOPPING 國品	210
TOP TEN 鈦田	211, 212
TOSHIBA 東芝	213, 214, 215, 216, 217, 218, 295, 296, 297, 314, 315, 433, 434,
VENUS 維納斯	219, 220
ViewSonic	221, 222, 223, 224, 298, 299, 321, 322, 323
ViewSonic 103	283
VITO	225, 226, 227, 228, 229, 230, 293, 300
VIZIO	231, 316, 317, 437
VTEK	232, 320
Waltz 華爾滋	176, 233, 234, 301
WEELGO OD	235
Westinghouse 西屋	174, 236, 237, 238, 239, 240, 241, 242, 302, 303, 364, 367, 368, 369, 370, 371, 372, 373, 374
ZEN Audio	243
ZIN WELL 兆赫	244, 245
ZINWEU	436,
新世代	246, 280
FUJITSU 富士通	262
奇美 32RT	304
普騰 60TW	305
家福	375, 376
瀚斯	387, 388, 389
亨輯	391
others	247, 248, 249, 250, 251, 252, 253, 429, 430

## Trouble Shooting

If your remote cannot work after installation, please check followings:

RF remote for PC :

- a. Make sure you have connected the receiver correctly to the computer. The receiver has been properly plugged into computer's USB ports.
- b. Make sure you have inserted two AAA batteries into its compartment correctly.
- c. If without any interference, such as other computer peripherals, the working distance (distance between remote and the receiver) is about 10 meters.

IR remote for TV :

- a. Make sure you have inserted two AAA batteries into its compartment correctly.
- b. There is no guarantee that interference will not occur in a particular installation. User is encouraged to try to correct the interference by one of the following measures ;
  - Reorient or relocate the receiving antenna.
  - Consult the dealer or an experienced radio/TV technician for help.

# FCC Information:

The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph:

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no grantee that interference will not occur in a particular installation. If this equipment dose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.